 
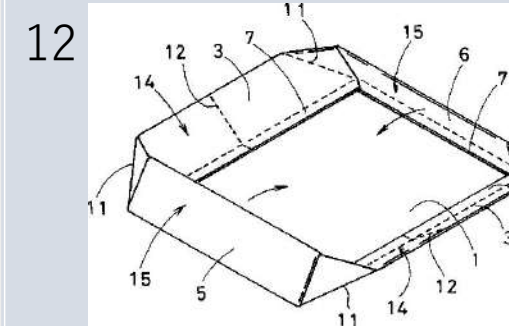 
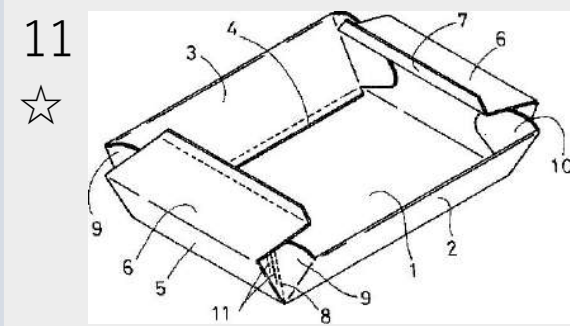 
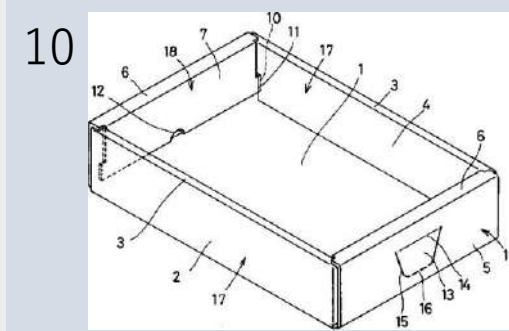 
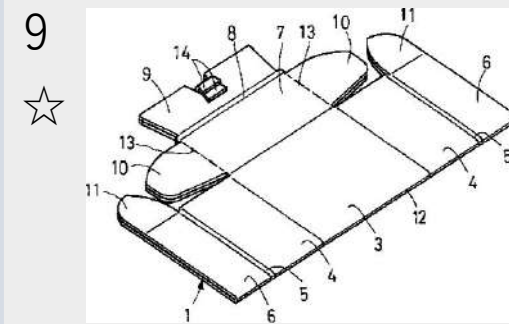 
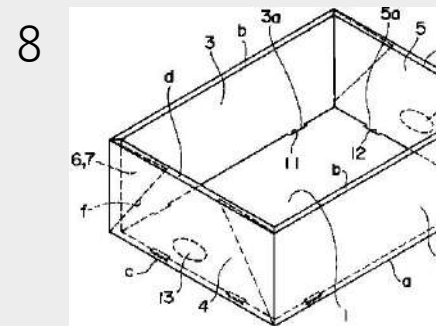 
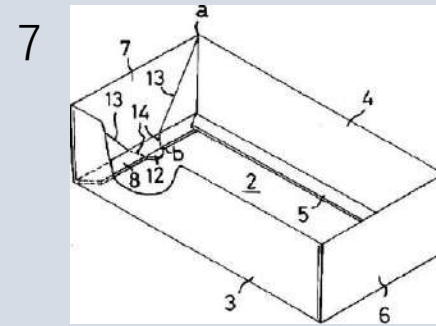 
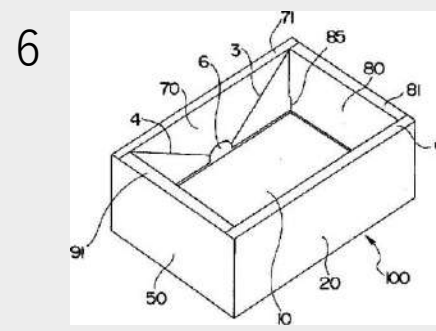 
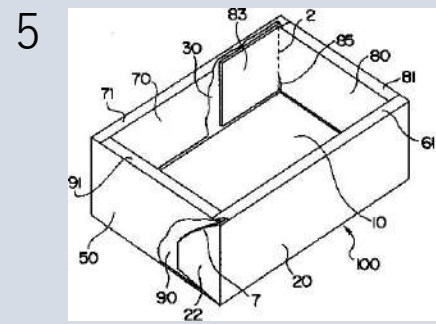 
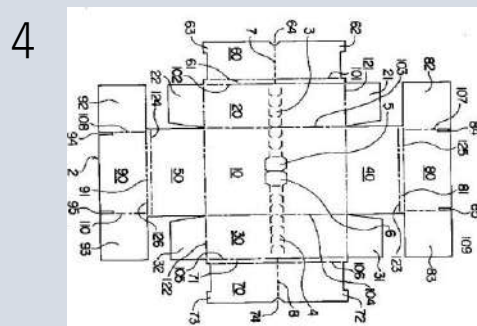 
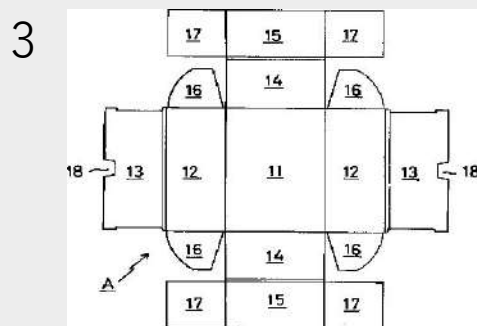 
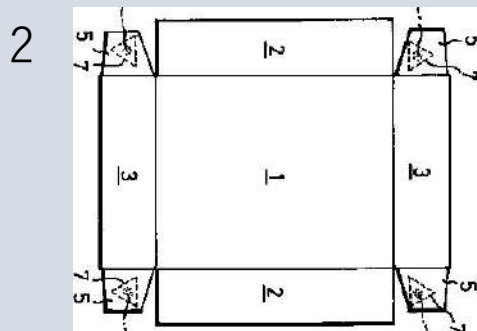 
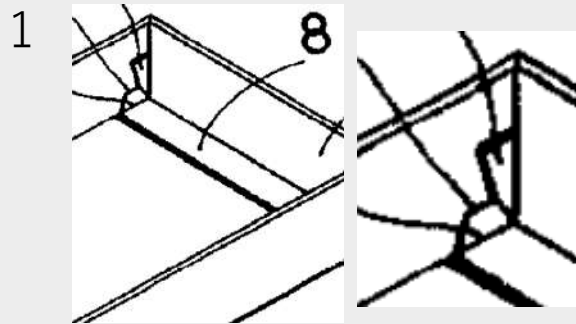 
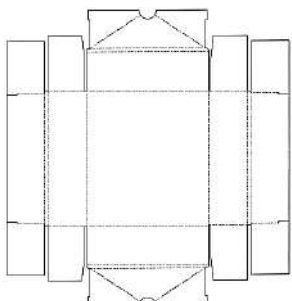 


易解体 (ギフト)

形態種別

 
- ①指掛け部と斜め罫線
- ②折込み部補助罫線
- ③折畳み用罫線
- ④メルト封緘部切取線
- ⑤解体後二つ折り保持
- ⑥ロック解除隙間形成
- ⑦その他

易解体形態

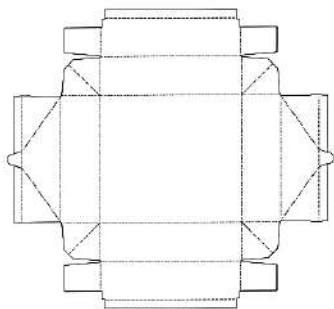


<20年以上経過> 一般紙器


13

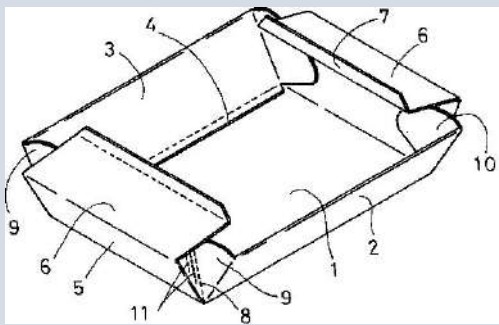

17

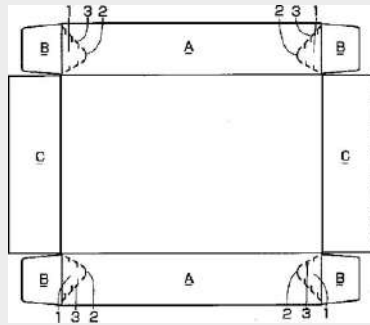 


21

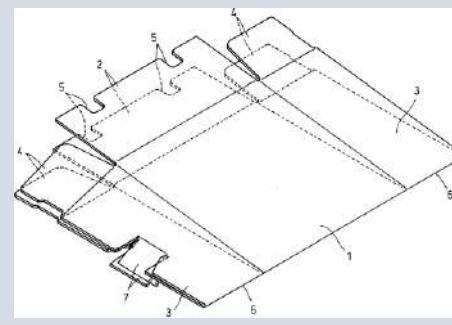 


25

 14

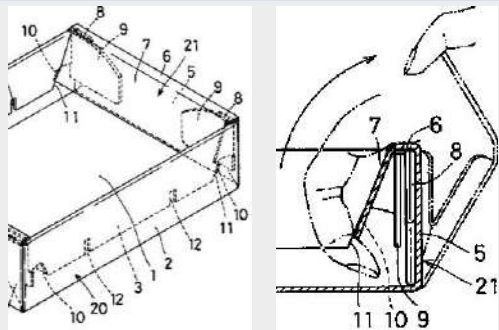


18

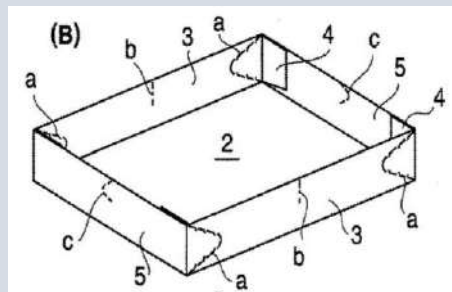 


22

26

 15

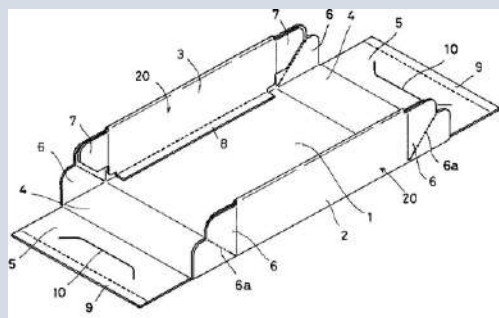


19

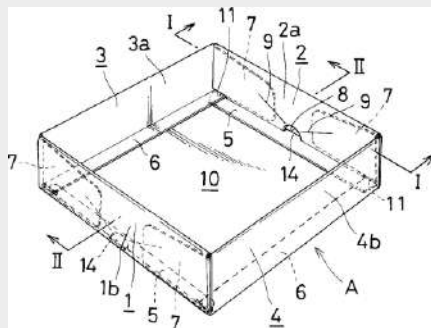 


23

27

 16

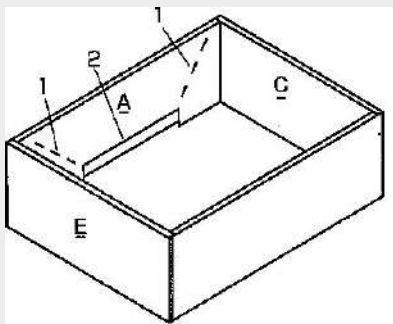

20

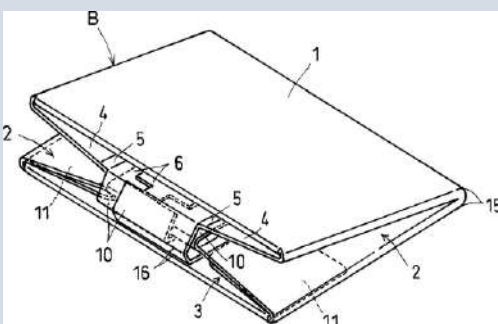 

24

28